


TEHNIČNI LIST - DIMEZIJE


KARDANSKI NASTAVEK PUŠA

ŠIFRA	NOTRANJI PROFIL	ZUNANJI Ø (mm)	SKUPNA DOLŽINA (mm)	DOLŽINA UTORA (mm)	UPORABA / OPOMBE
14805	1" 1/8	38	100	70	Ferguson T20
100198	1" 3/8	48	60	60	
100199			100	100	
100158			150	150	
100201			200		
12178	1" 3/4	60	80	80	
12179			120	100	
14806	11 UNI 221	25	40	30	11x14x3 - 6 utorov
14807	13 UNI 221	28		40	13x16x3.5 - 6 utorov
14808	15x12 - 8 spline DIN 5482	30			40
14809	16 UNI 221			50	50
14810	17x14 - 9 spline DIN 5482	28	40	40	17x14 - 9 utorov DIN 5482
100239	18x15 - 10 spline DIN 5482	30			18x15 - 10 utorov DIN 5482
14811	18 UNI 221	32	50	50	18x22x5 - 6 utorov
14812	19x22x3.5 - 10 spline		40	40	Pasquali tip 1
100157	20x17 - 12 spline DIN 5482	30	55	55	20x17 - 12 utorov DIN 5482
14813	21 UNI 221	38	60	60	21x25x5 - 6 utorov
14814	22x19 - 13 spline DIN 5482	32	45	45	22x19 - 13 utorov DIN 5482
14815	23 UNI 221	38	60	60	23x28x6 - 6 utorov
11120	25x22 - 14 spline DIN 5482	35	45	45	25x22 - 14 utorov DIN 5482
14816	26 UNI 220	42	60	60	26x30x6 - 6 utorov
14817	26 UNI 221				26x32x6 - 6 utorov
14818	28x25 - 15 spline DIN 5482	40			28x25 - 15 utorov DIN 5482
14819	28 UNI 220	45			28x32x7 - 6 utorov
14820	28 UNI 221		28x34x7 - 6 utorov		
100049	30x27 - 16 spline DIN 5482	42	50	50	30x27 - 16 utorov
14821	30x27 - 18 spline				Sep - Valpadana


11121	35x31 - 18 spline DIN 5482	48			35x31 - 18 spline
--------------	----------------------------	----	--	--	-------------------

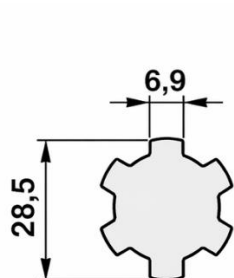


1"1/8 Z=6

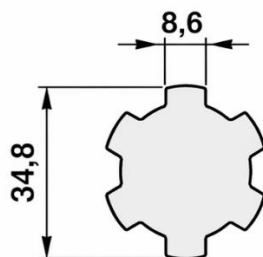


1"3/8 Z=6

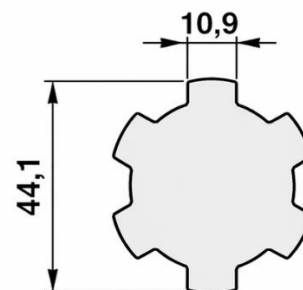


1"3/4 Z=6

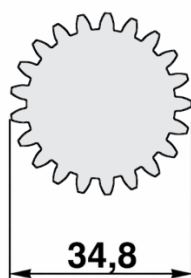


1"3/8 Z=21

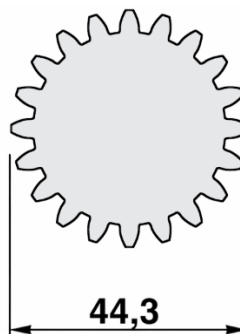


1"3/4 Z=20

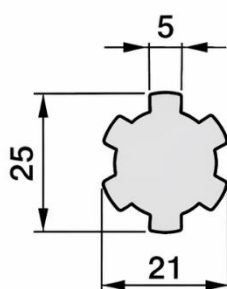

21 UNI221 Z=6

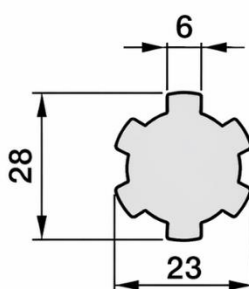

23 UNI221 Z=6

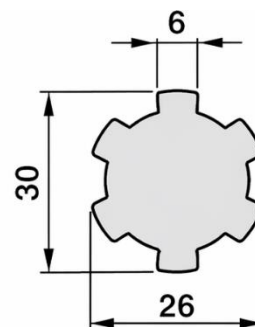

26 UNI220 Z=6